



# Neato Botvac D75 Battery Replacement

Procedures to remove the battery from the Neato Botvac D75.

Written By: Juan Cornejo



## INTRODUCTION

The battery is made from Nickel Metal Hydride (NiMH) with 3600mAh battery capacity and 12 Volt DC.



---



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)
-

## Step 1 — Battery

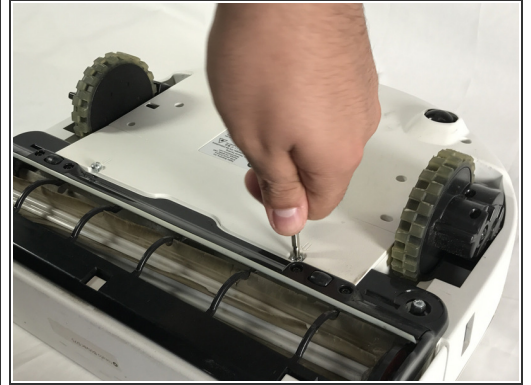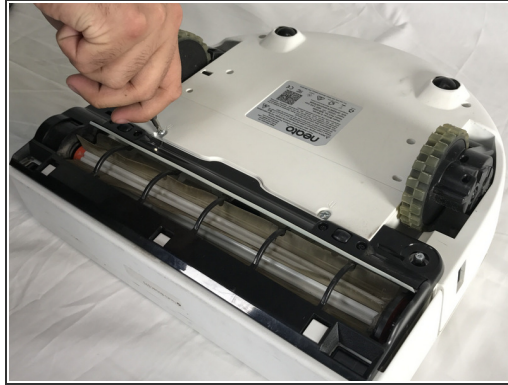

- Use Phillips #1 screwdriver to unscrew the two bottom cover screws

⚠ Be careful, the screws are self-retained on the cover itself and does not come off the battery cover.


## Step 2



- Lift battery cover out.

## Step 3



 Be careful when taking out the battery. Do not pull on the wires or battery trying to get the connector out.

- The cord has prongs on it that are a little difficult to get out. Use a flathead screwdriver to press the release tab on the connector to remove it.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-06 06:07:43 PM.